


NOTES:

1. INSTALL 24 JUMPER WIRES AS SHOWN.
2. INSTALL TANTALUM CAP. C1 + C2 AND ALL DIODES WITH POLARITY AS SHOWN.
3. INSTALL A1 THRU A6 WITH TABS IN POSITION AS SHOWN.
4. ALL DIODES ARE IN 914.
5. FOR SCHEMATIC SEE C-1047-003
6. FOR PARTS LIST SEE APL-1047-007

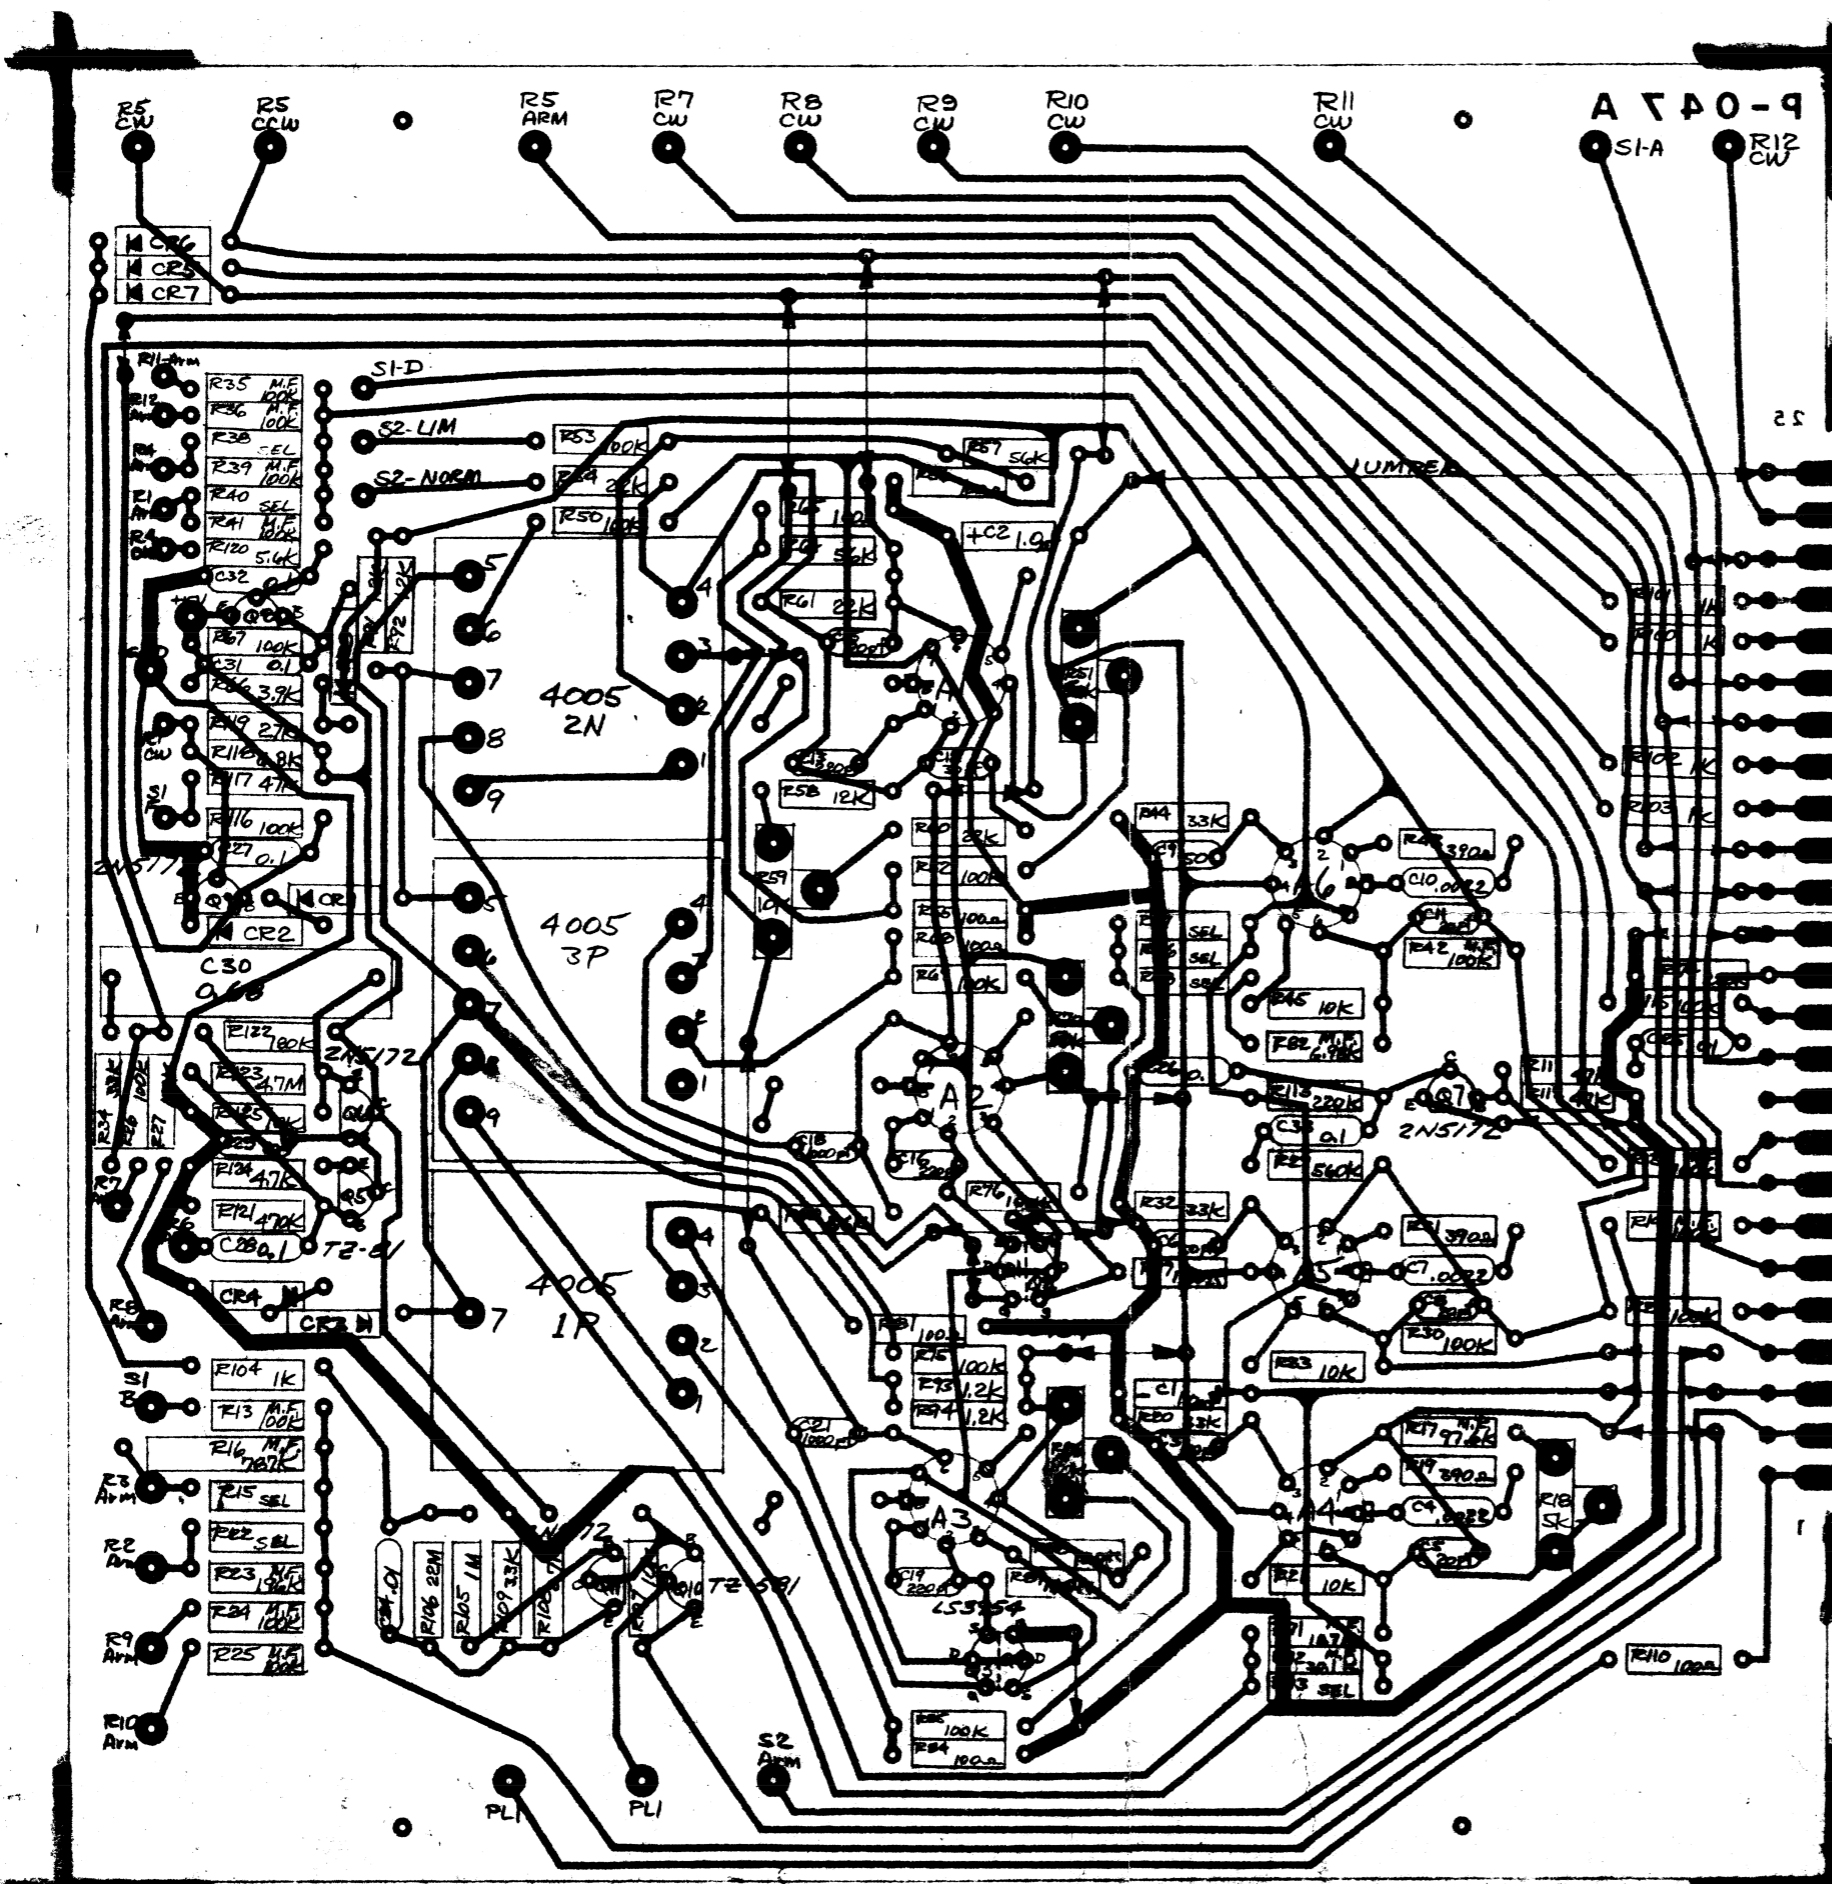

COMPONENT SIDE

REVISIONS			tonus, inc.	NO. REVISED DATE	REVISION DESCRIPTION
REV.	DATE	BY			
A	6-5-70	FDH			P.C. ASSEMBLY MODULE 1047
B	6-10-70	FDH			MULTIMODE FILTER/RESONATOR
C	6-24-70	FDH			E. HALSACH 2/1
D	6-24-70	FDH			6-5-70
E					
F					